

Oct 24, 2025

Version 1

SIMPLseq protocol V.1

DOI

<https://dx.doi.org/10.17504/protocols.io.5qpvodd3zg4o/v1>

Philipp Schwabl^{1,2}, Katrina Kelley^{1,2}

¹Harvard T.H. Chan School of Public Health; ²Broad Institute of MIT and Harvard

SIMPLseq



simplseq

Create & collaborate more with a free account

Edit and publish protocols, collaborate in communities, share insights through comments, and track progress with run records.

Create free account

OPEN  ACCESS



DOI: <https://dx.doi.org/10.17504/protocols.io.5qpvodd3zg4o/v1>

Protocol Citation: Philipp Schwabl, Katrina Kelley 2025. SIMPLseq protocol. **protocols.io**
<https://dx.doi.org/10.17504/protocols.io.5qpvodd3zg4o/v1>

License: This is an open access protocol distributed under the terms of the **Creative Commons Attribution License**, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Protocol status: Working

We use this protocol and it's working

Created: October 23, 2025

Last Modified: October 24, 2025

Protocol Integer ID: 230564

Keywords: locus plasmodium falciparum ampseq miniplex, locus plasmodium, informative malaria parasite loci, simplseq protocol simplseq, pcr1, pf3d7-1335900, pf3d7-0424400, ampseq miniplex, gene, pf3d7-0207300

Disclaimer

Always remember hood sterilization before use

Abstract

SIMPLseq is a 6-locus *Plasmodium falciparum* AmpSeq miniplex optimized for high-sensitivity analyses that also integrates a contamination detection system based on well-specific inline barcodes applied during PCR1.

The 'six informative malaria parasite loci' contained within the panel represent the following 6 genes:

- CSP (Pf3D7_0304600)
- TRAP (Pf3D7_1335900)
- SERA8 (Pf3D7_0207300)
- SURFIN 4.2 (Pf3D7_0424400)
- WDCP (Pf3D7_1410300)
- KELT (Pf3D7_1475900)

Attachments



[barcodes.xlsx](#)

9KB

Image Attribution

Figure 1. PCR1 product Bioanalyzer traces before (left) and after (right) ExoSap digestion.

Figure 2. Bioanalyzer traces for PCR2 product pools after bead clean-up. 4CAST libraries (example shown at right) often require more elaborate, aggressive clean-up steps.



Materials

- SIMPLseq PCR1 primers (sequences indicated in protocol) – purchase from IDT
- KAPA HiFi HotStart ReadyMix (2x) – Roche 07958927001
- Exonuclease I – Thermo Scientific EN0581
- FastAP – Thermo Scientific EF0651
- Nextera UD index sequences [10 µM plate] – purchase from IDT
- AMPure XP beads – Beckman-Coulter A63880
- 80% ethanol – via Sigma-Aldrich E7023 stock or similar
- Magnetic rack for 0.2 ml tubes – EpiCypher 10-0008 or similar
- 10 mM Tris-Cl pH 8.5 – Teknova T1275 or similar
- Qubit dsDNA Quantification Kit – Thermo Scientific Q32851
- Bioanalyzer High Sensitivity DNA Reagents – Agilent 5067-4627
- KAPA Library Quantification Kit – Roche KK4824
- MiSeq Reagent Kit v2 (500-cycles) – Illumina MS-102-2003

Other items are standard to most molecular laboratories (thermocyclers, plate spinners, centrifuge, Qubit, Bioanalyzer, etc. – see protocol).

SIMPLseq primer cocktail preparation (for a 96-well plate)

- 1 Combine 10 μ l of each PCR1 primer at 100 μ M into an 1.5 ml Eppendorf tube. Store at -20°C .

PCR1 primer sequences (5'-3'):

- CSP_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAGTTAAGGAACAAGAAGGATAATACCA
- CSP_Rv:
GTCTCGTGGGCTCGGAGATGTGTATAAGAGACAGAAATGACCCAAACCGAAATG
- TRAP_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAGTCCAGCACATGCGAGTAAAG
- TRAP_Rv:
GTCTCGTGGGCTCGGAGATGTGTATAAGAGACAGAAACCCGAAAATAAGCACGA
- SERA8_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAGACGAATTGTATTTCTCCTAATATGTGC
A
- SERA8_Rv:
GTCTCGTGGGCTCGGAGATGTGTATAAGAGACAGGGCACATAATCCAATAGATGTCCC
- SURFIN_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAGAGCCAAAAAGGAGATCAGCAAAG
- SURFIN_Rv:
GTCTCGTGGGCTCGGAGATGTGTATAAGAGACAGTGCTTCATCCAAACATACATCCTC
- WDCP_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAGTGTCTACACGCGTATTTCATAGCT
- WDCP_Rv:
GTCTCGTGGGCTCGGAGATGTGTATAAGAGACAGAGACGAAAAAATTGGGAACATACCA
- KELT_Fw:
TCGTCGGCAGCGTCAGATGTGTATAAGAGACAG*****AGAAAATAACAAGAGAATCAG
GGCAA
- KELT_Rv:
TCTCGTGGGCTCGGAGATGTGTATAAGAGACAG*****TCCATCTCTAGGTAATAACGT
ACCATT

The asterisks (*****) indicate the optional use of inline-barcoded primer pairs. To maintain assay sensitivity, we only apply this feature to a single primer pair (KELT). We use a combinatorial arrangement of barcode sequences for each 96-well plate (see layout example in barcodes.xlsx).

- 2 Perform a 60/40 dilution (e.g., 120 μ l primer mix + 80 μ l nuclease-free water (NF dH₂O) to achieve 5 μ M per primer working concentration.



PCR1

- 3 Prepare PCR1 master mix using the following *minimum volumes per sample:

*Increase DNA and all other inputs indicated in steps 3-5 by a factor of 3 if you can.

- 5 µl KAPA HiFi HotStart ReadyMix (2x) – Roche 07958927001
- 1.5 µl PCR1 primer mix [5 µM per primer]
- 4 Add 6.5 µl PCR1 master mix to every plate well.
- 5 Add 4 µl sample genomic DNA (or control templates, placed randomly throughout the plate).
- 6 Place plate on a thermocycler with the following amplification settings:

- 1× 95 °C – 3:00
- 29× 98 °C – 00:20 57 °C – 00:15 72 °C – 00:30
- 1× 72 °C – 01:00
- 1× 4 °C – hold

ExoSap digestion

- 7 Transfer 5 µl PCR1 product into new plate.
- 8 Using using Thermo Scientific EN0581 and EF0651, make digestion master mix on ice: 0.25 µl Exonuclease I (5 u) + 1.0 µl FastAP (1 u) per sample. Make enough volume for twice your number of samples given the viscosity of the mix.
- 9 Add 1.25 µl digestion master mix to your plate of 5 µl PCR1 samples.
- 10 Incubate for 30 minutes in thermocycler: 37 °C – 15:00, 85 °C – 15:00, 4 °C – hold.
- 11 Add 12.5 µl NF dH₂O to each sample (2-to-1 dilution) and mix thoroughly.

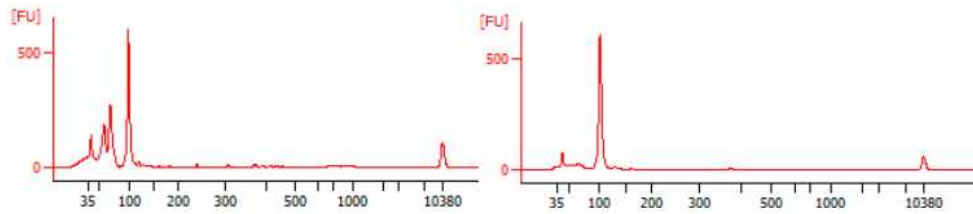


Figure 1. PCR1 product Bioanalyzer traces before (left) and after (right) ExoSap digestion.

PCR2

12 Prepare PCR2 master mix using the following volumes per sample:

- 5 µl KAPA HiFi HotStart ReadyMix (2x) – Roche 07958927001
- 2 µl NF dH₂O

13 Add 7 µl PCR2 master mix to every plate well.

14 Add 2.2 µl Nextera unique dual index [10 µM plate] into each well.

These index sequence pairs are of the form:

5' – AATGATACGGCGACCACCGAGATCTACAC – 10 bp index – TCGTCGGCAGCGT*C – 3'

5' – CAAGCAGAAGACGGCATACGAGAT – 10 bp index – GTCTCGTGGGCTCG*G – 3'

The asterisk (*) indicates phosphorothioate bond.

These can be purchased with standard de-salt purification in ca. 10 ul volumes per well.

15 Add 3 µl digested/diluted PCR1 product to each well.

16 Place plate on a thermocycler with the following amplification settings:

- 1× 95 °C – 03:00
- 10× 98 °C – 00:20 65 °C – 00:30 72 °C – 00:30
- 1× 72 °C – 01:00
- 1× 4 °C – hold

Sample pooling and clean-up (removal of fragments except the ca. 300-550 bp target range)

- 17 Combine equal volumes (~4 µl) of each sample into a 2.0 ml Eppendorf tube. If there are many samples, use a multichannel and combine into a reagent reservoir, mix well, and then add into the tube.
- 18 Perform clean-up using AMPure XP beads (Beckman-Coulter A63880):
 - a) Transfer 100 µl of combined sample into a PCR tube and add 80 µl beads (0.8x clean-up). Mix well.
 - b) Incubate at room temperature for 5 minutes.
 - c) Place on magnetic rack for 5 minutes.
 - d) Discard supernatant and wash twice with 200 µl of fresh 80% ethanol while still on the rack. Incubate for 30 seconds between the two washes.
 - e) Remove remaining traces of ethanol via pipette and allow to evaporate for 2 minutes.
 - f) Elute in 50 µl 10 mM Tris-HCl pH 8.5, close caps and incubate for 8-10 minutes at 57 °C, then place on magnetic rack and allow the pellet to form (~5 min).
 - g) Transfer 50 µl supernatant to new tube. Avoid residual beads, e.g., aspirate slightly under the total volume (49 µl) if clean transfer is otherwise not possible.
- 19 If necessary, repeat 0.8x clean-up for 50 µl library (i.e., use 40 µl beads). Elute in ~15 µl at step g.

Bioanalyzer QC / library selection

- 20 Fragment size-specific DNA quantification can be performed using Bioanalyzer High Sensitivity DNA Reagents (Agilent 5067-4627). It is best to first verify via Qubit dsDNA Quantification Kit (Thermo Scientific Q32851) that your input concentrations fall within Bioanalyzer's linear dynamic range (ca. 50 pg/µl – 10 ng/µl). In our experience, size-selected libraries (created in step 19) generally require ca. 1:100 dilution (in 10 mM Tris-Cl pH 8.5 + 0.1% Tween-20) to reach appropriate concentrations for Bioanalyzer.
- 21 Follow manufacturer's instructions to run the Bioanalyzer High Sensitivity DNA protocol. Expected fragment size are 473 bp (CSP), 500 bp (TRAP), 426 bp (SERA8), 415 bp (SURFIN), 425 bp (WDCP), and 381 bp (KELT). See results below for double 0.8x clean-up on a low-parasitemia sample set (middle plot) in comparison to what you might get with the 4CAST assay (right plot).

22

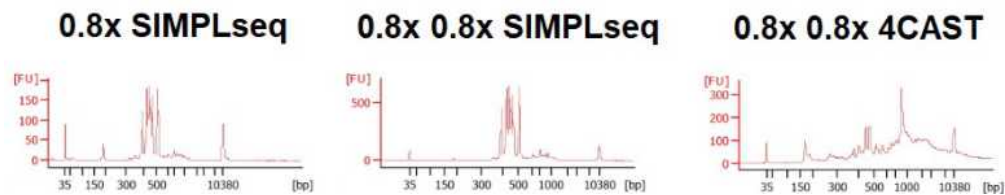


Figure 2. Bioanalyzer traces for PCR2 product pools after bead clean-up. 4CAST libraries (example shown at right) often require more elaborate, aggressive clean-up steps.

qPCR quantification of selected library

- 23 Thaw the qPCR reagents (KAPA Library Quantification Kit – Roche KK4824), except the SYBR FAST component, which will be thawed just before use. Gently vortex and centrifuge the kit controls before use.
- 24 Dilute sample library such that it enters the 0.1-10 pM range (this represents the upper-middle range of the kit's standard curve – see next step). For example, for a library preliminarily estimated as 20 nM via Bioanalyzer or Qubit, dilute 1:10,000 using NF dH₂O. This yields 2pM.
- 25 Dilute Standard 0 (200 pM stock concentration) 1:100.

Standards (S1-S6) do not require dilution.

Standard 1 – 20 pM

Standard 2 – 2 pM

Standard 3 – 0.2 pM

Standard 4 – 0.02 pM

Standard 5 – 0.002 pM

Standard 6 – 0.0002 pM

Standard 0 – 2 pM after 1:100 dilution

- 26 Prepare qPCR master mix (Roche KK4824) using the following volumes per sample:

- 10 µl KAPA SYBR FAST qPCR Master Mix (2X)
- 2 µl Primer PreMix
- 4 µl NF dH₂O

- 27 Add 16 µl of qPCR master mix to each well.

- 28 Plate the standards in triplicate, 4 µl per well. Then plate 4 µl sample library and negative control (NF dH₂O), likewise in triplicate.



It is optional but recommended to also add any available reference libraries (e.g., libraries which clustered well in prior sequencing runs, and the PhiX aliquot to be used in the current run). This helps confirm accurate quantitation. 

29 Seal and spin for ~30 seconds before placing in light cycler with the following amplification settings:

- 1× 95 °C – 5:00
- 35× 95 °C – 00:30 60 °C – 00:45 *with data acquisition

Final sequencing preparation

30 Dilute library to 5 nM for Illumina MiSeq.

31 Follow Illumina's guide to *Denature and Dilute Libraries for the MiSeq System*, targeting a final library concentration of 14 pM with 20% PhiX.