



Jul 15, 2024

🌐 Standardized Protocol for Soil Survey and Archaeological Diagnosis for the DOPAMICS Research Program

DOI

<https://dx.doi.org/10.17504/protocols.io.14egn768pv5d/v1>



Marc Testé¹, Kevin Mabobet¹, Julien Engel¹, Louise Brousseau¹

¹Institut de Recherche pour le Développement, UMR AMAP



Louise Brousseau

Institut de Recherche pour le Développement, UMR AMAP

Create & collaborate more with a free account

Edit and publish protocols, collaborate in communities, share insights through comments, and track progress with run records.

Create free account

OPEN  ACCESS



DOI: <https://dx.doi.org/10.17504/protocols.io.14egn768pv5d/v1>

Protocol Citation: Marc Testé, Kevin Mabobet, Julien Engel, Louise Brousseau 2024. Standardized Protocol for Soil Survey and Archaeological Diagnosis for the DOPAMICS Research Program. **protocols.io**

<https://dx.doi.org/10.17504/protocols.io.14egn768pv5d/v1>

License: This is an open access protocol distributed under the terms of the **[Creative Commons Attribution License](#)**, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Protocol status: Working

We use this protocol and it's working

Created: March 13, 2022

Last Modified: July 15, 2024

Protocol Integer ID: 59399

Keywords: DOPAMICS, pre-Columbian societies, ring ditch, human science, pedology, soil, archaeology, French Guiana, Guyane française, ERC, archaeological diagnosis for the dopamics research program, dopamics research program for palm sampling, standardized protocol for soil survey, extensive soil survey, soil survey, dopamics research program, french guiana, archaeological diagnosis, palm sampling, funded dopamics research program, soil, grand plateau, up of the research transect, reproducibility of the research, cnrs nouragues research station, research transect, research

Funders Acknowledgements:

ERC

Grant ID: DOPAMICS grant number 101039272

Abstract

We describe the protocol developed as part of the ERC-funded **DOPAMICS** research program for palm sampling in three forested pre-Columbian sites in French Guiana: MC87 near Régina, the "Grand plateau" in the CNRS Nouragues Research Station, and Mont Galbao near Saül.

This protocol follows the setting-up of the research transect (see "before start" section). It aims to carry out an extensive soil survey and archaeological diagnosis.

This protocol is made open access under the Creative Commons Attribution License (CC-BY). It details the sampling strategy and steps, and the material needed with the aim to encourage future reuses of this protocol for the same or similar research purposes, and to improve the reproducibility of the research conducted. Reuse of this protocol must credit the authors and mention its DOI and download link.



European Research Council

Established by the European Commission

Image Attribution

Elodie Schloesing #DOPAMICS2022

Materials

- Soil auger for hard and stony soils (gouge, edelman or riverside)



Eijkelpark riverside auger
<https://www.royaleijkelpark.com>

- Measuring tape of 1 or 2 meter long
- Handling gloves
- Spatula
- 2L Zip-lock plastic bags (for soil samples)
- Sampling pots or zip-lock plastic bags (for soil artifacts)
- Large (bullet) tip permanent marker (to write on plastic bags)
- Sieve (5mm)
- Colorimeter



CAPSURE PANTONE

By Colorimex



Authorized PANTONE Partner

Colorimex Pantone Capsure colorimeter
<https://www.pantone.com>

- 20 mL graduated cylinder
- Sieve (160 μm)
- Sodium hexametaphosphate ($\text{Na}_6\text{P}_6\text{O}_{18}$) solution (40g/L)
- Orbital shaker
- Petri dishes
- Stereo microscope (8-40X)
- Manual clicker counter

Safety warnings

- ⚠ Working in isolated areas of the Amazonian rainforest can be dangerous. To ensure safety, it is important to carry a fully charged satellite phone and GPS device, and a first aid kit. It is also advisable to consult a doctor to undergo a health check-up before embarking on remote expeditions.

Before start

Protocol



NAME

Standardized Protocol for Transect Set-up and Palm Inventory for the DOPAMICS Research Program

CREATED BY

Louise Brousseau

Preview

- Make sure the satellite phone and GPS batteries are fully charged.
- Gather all necessary materials.

Foreword: Sampling Strategy

- 1 Soils are sampled every 50 meters along the research transect spanning from the ring ditch hill (RH) to an adjacent hill or slope with no or sparse evidence of pre-Columian occupation (i.e. adjacent Hill, AH), according to the position of the pickets (Cx= Cstart, C1, C2, etc.).
→ see "Standardized Protocol for Transect Set-up and Palm Inventory for the DOPAMICS Research Program"

Additional pits are collected in the landscape surrounding the central line on the ring ditch hill (RHx = RH1, RH2, etc.) and, eventually, on the adjacent hill (AHx= AH1, AH2, etc.).

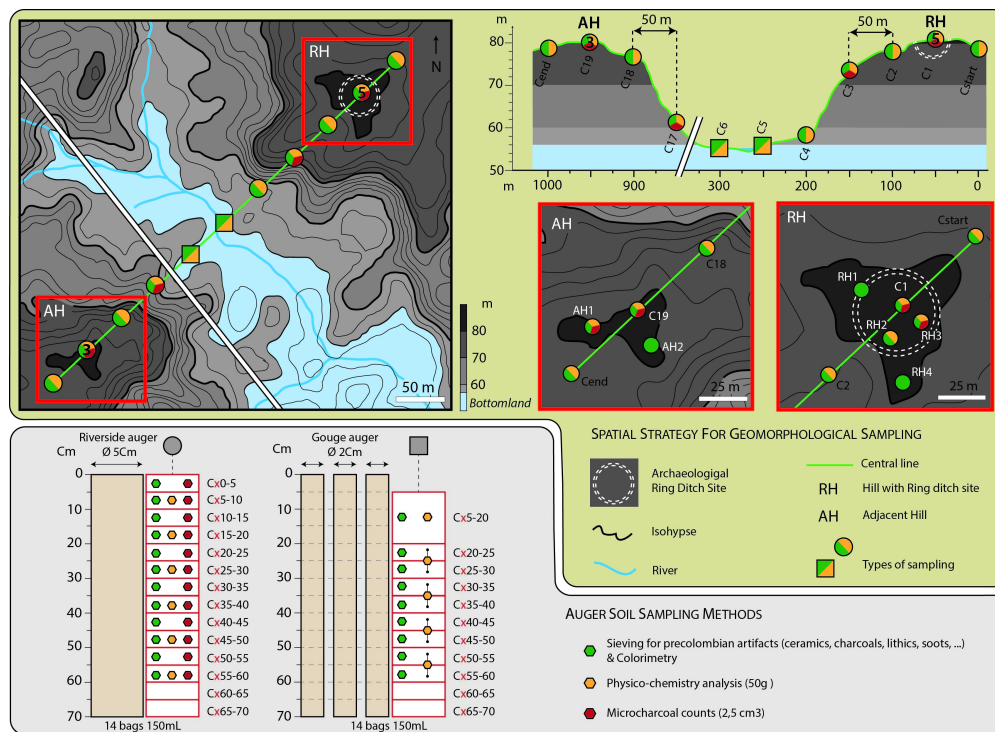


Figure 1. Sampling strategy.

Soils are sampled with a riverside auger (terra-firme, circles) or a gouge auger (bottomland, squares). "Cx" refer to pits made along the transect (Cstart, C1, C2, etc.). "RHx" and "AHx" refer to additional pits pits on the ring ditch hill (RH1, RH2, etc.) and on the adjacent hill or slope (AH1, AH2, etc.).

Soil sampling



- 2 Every 50 meters along the central line (at the position of pickets "Cstart", "C1", "C2", etc.) and at the position of additional pits ("RH" and "AH"),
 - Collect soil samples every 5 cm in depth, starting from the surface to 120 cm in depth
 - Put the soil samples in zip-lock plastic bags
 - With a large tip permanent marker, write down the sample ID on the plastic bag
 - Record the GPS position of the pit

Note

Non-redundant soil sample ID formatting: "[SITE ID]_[pit ID].[depth range]"

- [site ID]= "MC87" (MC87), "NOUR" (Nouragues), "GALB" (Mont Galbao)
- [pit ID]= "Cstart", "C1", "C2", "C3", "RH1", "RH2", "AH1", "AH2", etc.
- [depth range]= "0-5", "5-10", "10-15", etc.

Lab analyses

- 3 Samples from 0 to 60 cm are analyzed in the laboratory.
The remaining samples (60 - 120 cm) are stored for further analyses.

Soil samples preparation and artifact extraction

- 3.1
 - Weigh wet soil samples
 - Dry the soil samples drying oven at 50°C
 - Sieve the soil (5 mm) to remove stones and roots and to extract archaeological artefacts (i.e. ceramic shards)
 - Extract macroscopic charcoals (>2mm) and soot deposits from the sieved fraction by hand
 - Transfer artifacts in sampling pots or zip-lock plastic bags
 - With a large tip permanent marker, write down the soil sample ID on the pot
 - Weigh dry soil samples
 - ⇒ **Note the wet and dry mass of the sample, the soil type (hydromorphic or ferrallitic soil), presence/absence of stones, roots and artifacts in your lab book or in an excel spreadsheet**

Selection of macroscopic charcoals for radiocarbon dating (subcontracted)

- 3.2 For each site,

- Identify soil layers with an increasing abundance of fragments of ceramics and charcoals in pits from the enclosure and slopes of the ring ditch (e.g. 0-45 cm deep)
- Select 10 charcoals >10mg (ideally between 20 and 100mg) for radiocarbon dating

Soil colorimetry

3.3 With a colorimeter, measure the colour of each soil sample

⇒ **Note the Munsell Color value in your lab book or in an excel spreadsheet**

Soil conditioning for physico-chemistry (subcontracted)

3.4

Note

Physico-chemistry is carried out on the following samples (see Figure 1):

- Terra-firme (6 samples/pit): Cx.5-10 ; Cx.15-20 ; Cx.25-30 ; Cx.35-40 ; Cx.45-50 ; Cx.55-60
 - Bottomland (5 samples/pit): Cx.5-20 ; Cx.20-30 ; Cx.30-40 ; Cx.40-50 ; Cx.50-60
- Weigh 100 - 200 mg of each dry soil sample from 5 to 60 cm deep
 - Transfer the sub-sample in a plastic bag for soil granulometry and chemistry analysis (pH, C, N, P, K, Mg, Ca, Na, Al)
 - Write down the sample ID on the plastic bag

Abundance of microscopic charcoals (< 2 mm)

3.5 The remaining soil samples are used to extract micro-charcoals.
The abundance of microcharcoals was evaluated every 100 meters along the central line in soil samples from the surface to 60 cm deep.

Note

The abundance of microcharcoals is evaluated on the following samples (see Figure 1):

- Terra-firme: Cx.5-10 ; Cx.15-20 ; Cx.25-30 ; Cx.35-40 ; Cx.45-50 ; Cx.55-60
- Bottomland: samples from bottomlands are excluded because of a high level of organics matter enrichment (due to a slower decomposition process), which makes it difficult to distinguish between charcoals and plant residues.

For each soil sample,



- Measure 2.5 cm³ of soil sample with a graduated cylinder containing a solution of sodium hexametaphosphate (Na₆P₆O₁₈) at 40g/L
- Transfer in a 50 mL Falcon tube and fill the tube with sodium hexametaphosphate (40 g/L) up to 50 mL
- Incubate the sample on an orbital shaker at ambient temperature for 12 hours
- Sieve the sample (160 µm)
- Transfer the sample in a Petri dish
- Oven dry the sample at 50° during 12 hours
- Put the Petri dish on a grid background composed of 0.25 × 0.25 cm squares
- Count the number of microscopic charchaols with a 40X stereo microscope and a manual clicker counter

⇒ **Note the Munsell Color value in your lab book or in an excel spreadsheet**

The remaining soil samples are stored in the plastic bags for further analyses.